

PHILIPS

dynalite 

DTE1210

12 x 10A Trailing Edge Installation Manual



contents

Warning.....	2	Connecting Analogue Control Cables.....	6
Features.....	2	Troubleshooting.....	7-8
Important Safeguards.....	2	Specification.....	8
Internal View.....	3		
Mounting.....	4		
Supply & Load Cable Connections.....	5		
Connecting Serial Control Cables.....	6		

WMGD Pty Limited trading as Dynalite ABN 33 097 246 92

Unit 6, 691 Gardeners Road Mascot NSW 2020 Australia

t +61 8338 9899

f +61 2 8338 9333

dynalite.info@philips.com

Philips.com/dynalite



Warning

- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS DEVICE TO RAIN OR MOISTURE.
- DO NOT ENERGISE UNLESS THE FRONT COVER IS IN PLACE.
- THIS DEVICE MUST BE EARTHED.
- INSTALLATION, PROGRAMMING AND MAINTENANCE MUST BE CARRIED OUT BY QUALIFIED PERSONNEL.

important safeguards

.....
Warning – This is a class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures.

Read Instructions – We recommend that you read this Instruction Manual Prior to commencement of installation. Retain instructions and give to the end user.

Troubleshooting - If problems are encountered, check the Troubleshooting section on page 10.

Special Programming – Once powered and terminated correctly this device will only operate in basic mode. A new Dynalite panel will turn on all lighting channels from button 1 and turn off from button 4 if network terminations are correct. Only once the full network is test correct can commissioning begin. Advanced functions can be commissioned via Envision software. If commissioning is required, contact your local distributor for details.

Check Connections – Treat this device as a switchboard that has been shipped. Tighten all load-carrying screw connections, as vibrations from transport can cause MCB and terminal block screws to become loose.

Power Sources – This device should only be operated from the type of supply specified on the front panel. This device *must* be earthed. Do not operate as a single phase device.

Output Circuits – The load on a circuit should not exceed the specified capacity of 10A. Loads should be calculated to ensure that the overall maximum capacity of 120A is not exceeded.


Input Circuits – These inputs are designed for dry contacts or analogue inputs only. Cables to these inputs must be treated as SELV, keep them segregated from mains cables.

Mounting Location – This device must be mounted right way up, on a vertical surface (refer to page 4 for mounting instructions). The specified minimum clearance of 100mm for all sides must be adhered to. Install in a dry, well-ventilated location. Controllers may emit some mechanical noise. Take this into account when deciding the mounting location.

Data Cable – The recommended cable for connections to the serial port is screened, stranded RS485 data cable with three twisted pairs. Part numbers for various manufacturers are listed on page 6. This cable should be segregated from mains cables by a minimum distance of 300mm. If anticipated cable runs are over 600 metres for serial cables, consult your dealer for advice. Do not cut or terminate live data cables.

features


-
- **Supply**
230V 50/60Hz three phase & neutral at 40A per phase. Do not operate as a single phase device.
 - **12 Trailing Edge dimmed outputs**
These outputs are suitable for controlling trailing edge transformers, as found in some brands of track lighting, and for leading edge electronic transformers.
 - **Convection Cooled**
This device is naturally aspirated, requiring no mechanical cooling system, when installed in accordance with these instructions.
 - **Many Control Options**
Control of this device can be from a combination of methods, eg. serial control port, relay contacts, push button wall stations, infra red receivers and timeclocks. Easy high-level interface to other popular AV control systems and Building Management Systems (BMS) is also available.
 - **Simple Installation**
Wall-mount enclosure with mounting lugs facilitates installation. Cable knockouts are provided, at the top of the enclosure for supply and load cables, with low voltage (LV) control at the bottom.

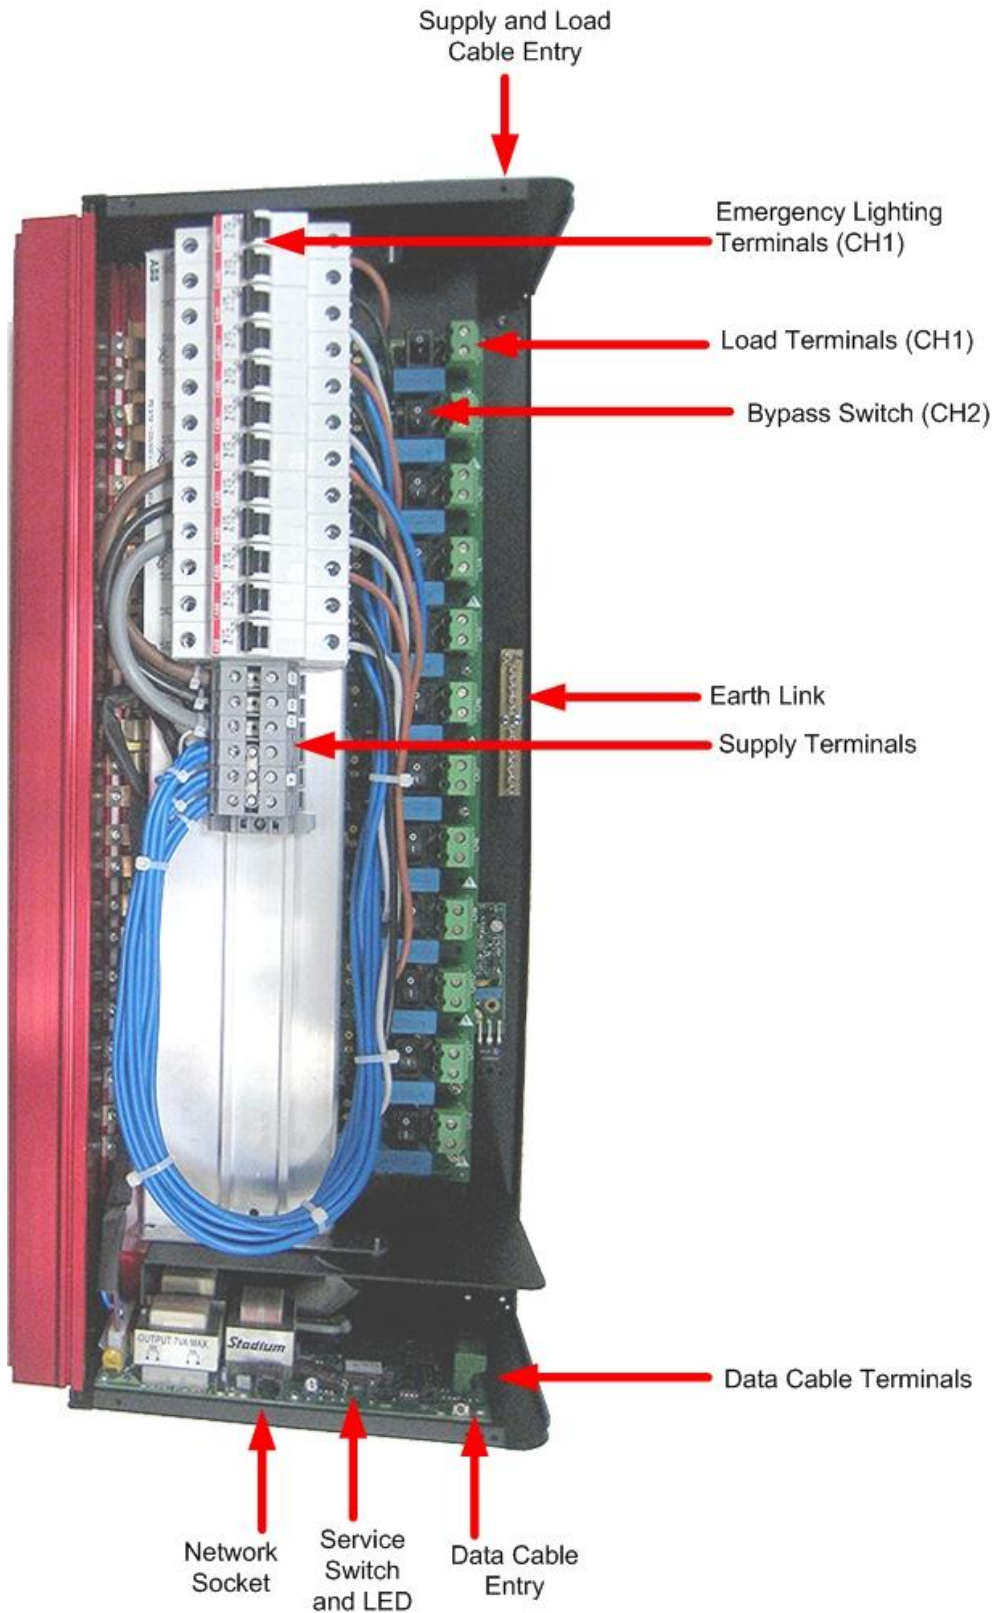

For spare parts, please call your nearest Dynalite Customer Service Centre, and specify:

DTE1210

supply and load cable connections

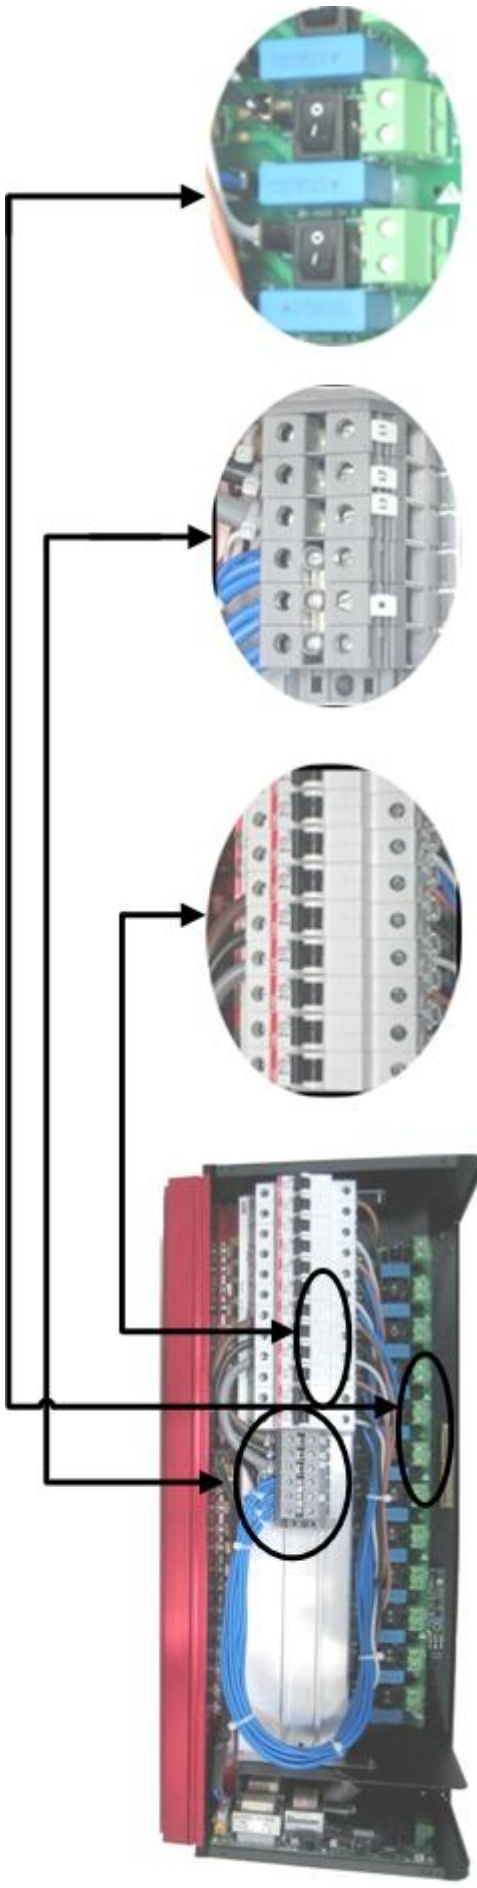

Supply Cables

The supply terminals are located toward the top of the enclosure and consist of Earth, Neutral, and Phase, all of which will accept up to 25mm² cables. The supply cables should have a capacity of 40A per phase, to allow the device to be loaded to its maximum capacity.

Load Cables

Load cables can be terminated on a Load & Neutral terminal strip, one pair for each channel, and an Earth link located at the centre of the enclosure. These connectors will accept up to 6mm² cables. Calculate the intended load, and ensure that it is below the maximum capacity of an individual channel, which is 10A. Do not use a common neutral at a remote location.

Emergency Lighting Connections

Emergency lighting of the non-maintained type may be fed from the load side on the circuit breaker for the relevant channel, as indicated by the labels next to the circuit breakers. Do not remove any cables that may already be terminated at this location.


Energising the Device

If it is necessary to energise load circuits before any control cables are connected, it is acceptable to replace the cover and energise the device immediately, as the default factory programming is to have all channels set to 100% output. If there is no output on any or all channels, see the troubleshooting section (page 10).

This device should be de-energised before terminating the control and data cables.

connecting serial control cables

Connect Data Cable in a 'Daisy Chain'

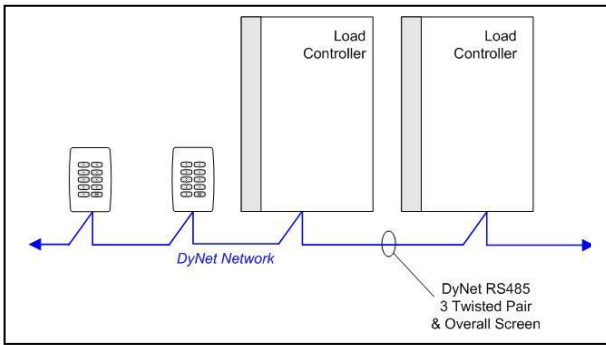

Determine Your Requirements

Serial Ports are used to interconnect other dimmers, smart control panels, sensors and AV controllers. Serial port devices can be identified by 4 terminals, labelled: GND, DATA+, DATA-, +VE.


Serial Cable Connections

There is one RS485 port for DyNet signals, in the form of a RJ12 socket, on the front panel, which is used for the temporary connection of a PC or a Portable Programmer. There are data terminals on the control card, for permanent connections. The recommended cable for connections to the serial port is screened, stranded RS485 data cable with three twisted pairs. Recommended cable types include:

- Belden: 9503
- Dynalite: DYNET-STP-CABLE
- Garland: MCP3S
- Hartland: HCK603
- M&M Cable: B2003CS
- M&M Cable: B9503CS
- Multicable: AWM E120236 2092 20
- RS Components: 368-687

One pair is paralleled for GND, one pair paralleled for +12V, and one pair used for DATA+ and DATA-.

RJ12 Socket Connections

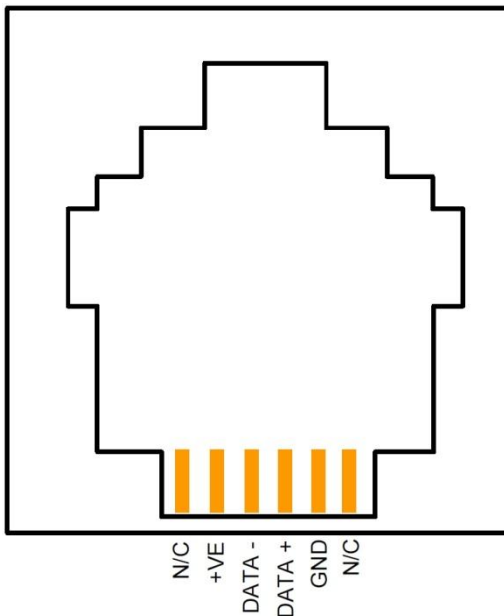


Recommended Cable Colour Coding

- Green/White pair paralleled for GND
- Orange/White pair paralleled for +12V
- Blue/White pair Blue for DATA+
- White for DATA-
- Brown/White pair Spare, or use for Shield when using unshielded cable.

The colour-coding scheme used is not critical, as long as the same scheme is used throughout the installation.

Serial Cable Permanent Connections

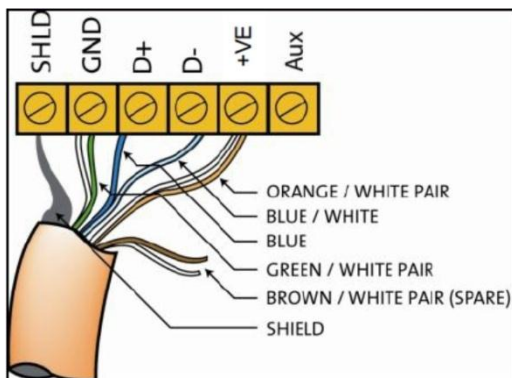

Serial Cable Connecting Method

The recommended connecting method is to 'daisy chain' devices (ie. starting at the first device, then looping in then out of devices, with a single cable terminating at the last device. There should not be any spurs or stubs, and only the first and last device should terminate 1 cable, all other devices should terminate 2 cables). Devices may be wired in any order. The Data Cable should be segregated from any Mains Cables by 30mm. *A data cable that is connected to an energised dimmer is live. Do not cut or terminate live data cables.* If the data cable has to cross over any mains cables, it should do so at a 90° angle.

AUX Input - This is a dry contact interface that is active low. The dry contact is connected between the AUX and GND terminals on the DyNet connector strip. The function of the AUX input is programmable. Ensure that the cable length between the dry contact and the terminal strip is no longer than 2 metres, and the cables are segregated from mains cables.

Service LED - The Service LED has 3 signalling modes, which are useful for troubleshooting:

Blinking slowly (1Hz) = Normal Operation
Blinking fast (4Hz) = Network Activity Detected
On = Fault

Service Switch - The Service Switch has three functions:

1 push = Transmit Network
ID3 pushes = All Channels
100%Push & hold for 4 sec = Reboot

Accessory Module Socket - Accepts plug in modules for optional features such as DMX512 ports. Consult your distributor for details on the available accessory modules.

notes

Check the following list. If you are still unable to rectify the situation, contact your nearest Dynalite office. A complete list of distributors worldwide can be found on the Internet at: www.philips.com/dynalite

Please ensure that you have completed the following prior to calling our technical support department.

- Check all symptoms in the Troubleshooting list
- Check for any deviations between the installation and the installation instructions
- Make a list of the model numbers of all devices used in the system

SYMPTOM	PROBABLE CAUSE	ACTION
Load Controller does not operate at all. No Service LED activity. Power supply indicator LED on PCB not lit.	Incorrect connection of Mains supply, or no power available.	Check power supply to Load Controller. Check Line and Neutral input connections.
Power supply indicator LED lit, but no Service LED activity.	Supply voltage too low, short circuit on network. Control PCB faulty.	Check supply voltage is at least 75% of rated voltage. Check 5V & 12V terminal voltages. 5V supply must be present. Disconnect network bus and restore power. Replace control PCB.
Load Controller will not respond to control panel push buttons.	Control panel incorrectly wired or incorrect configuration.	Check operation of LEDs on control panel. Push button on panel and study response of service LED.
Load Controller operates properly but circuit breakers keep tripping.	Instant tripping: - short circuit on load. Delayed tripping: - Load Controller overloaded.	Check load wiring for short circuits. Verify Load Controller loading with current tester (don't forget to de-rate for low power-factor loads and transformer losses). Check that the breaker terminals are tight.

Specification

Supply:	230V ±14% 50/60Hz 3-Phase Y at 40A per phase
Outputs:	12 x dimmed outputs (trailing edge phase control) at 10A
Maximum Total Box Load:	120A max.
Regulating Device:	Dual MOSFET's - 47A, 600V, 141A surge
Overload Protection:	12 x 10A 6kA single pole thermal magnetic circuit breakers on each channel
Control Inputs:	1 x RS485 serial port – DyNet & DMX512 1 x programmable dry contact AUX input
User Controls:	Service / Override Switch, Diagnostic LED 3 x Phase indicator LEDs Override switch - All channels to 100% Hardware bypass switch for each channel
Internal Controls:	Programmable Logic Controller Dynalite Accessory Module enabled
DyNet DC Supply +VE:	200mA (supply for approx. 20 Smart Panels)
Preset Scenes:	170
Supply Terminals:	Line1, Line2, Line3, Neutral, Earth ,1 x 16mm ² max conductor size
Output Terminals:	L, N, for each channel - 1 x 16mm ² max conductor size Earth link bar provided
Cable Entries:	Mains - 4 x 25mm ² knockouts on a 133mm x 44mm removable gland plate, Data - 1 x 25mm ² dia. knockout
Diagnostic Functions:	Device Online/Offline status Circuit breaker trip reporting (optional) Channel override switches
Compliance:	CE, C-Tick
Construction:	Alloy/Steel wall mount case with epoxy finish
Dimensions:	H 610mm x W 290mm x D 190mm (excludes wall brackets)
Weight:	Packed weight 16.7kg

DTE1210 Instruction Manual Rev G.docx. Specifications and design subject to change without notice.

Dynalite manufactured by WMGD Pty Ltd (ABN 33 097 246 921). All rights reserved. Dynalite, Dimtek, DyNet and DLight and associated logos are the registered trademarks of Dynalite Intelligent Light Pty Ltd. Not to be reproduced without permission.

Unit 6, 691 Gardeners Road Mascot NSW 2020 Australia Tel: +61 2 8338 9899 Fax: +61 2 8338 9333

E-mail: dynalite.info@philips.com

Web: Philips.com/dynalite